



Mount the panel into Snap profile

1

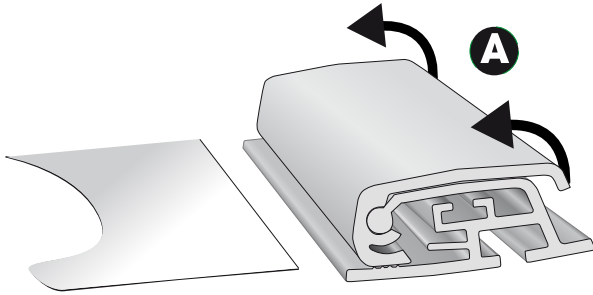

A. Open the profile by starting from the ends


2

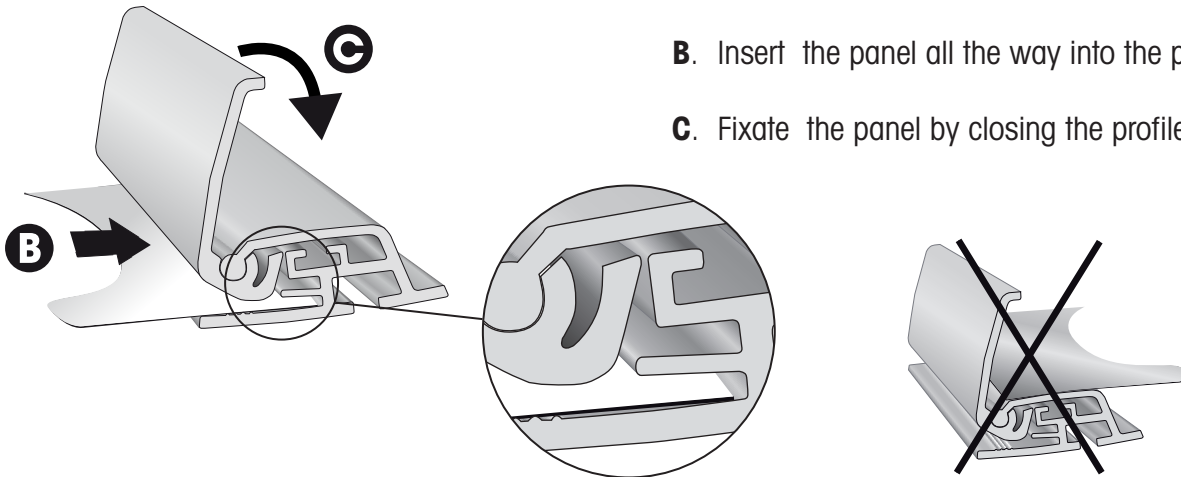

B. Insert the panel all the way into the profile

C. Fixate the panel by closing the profile

3

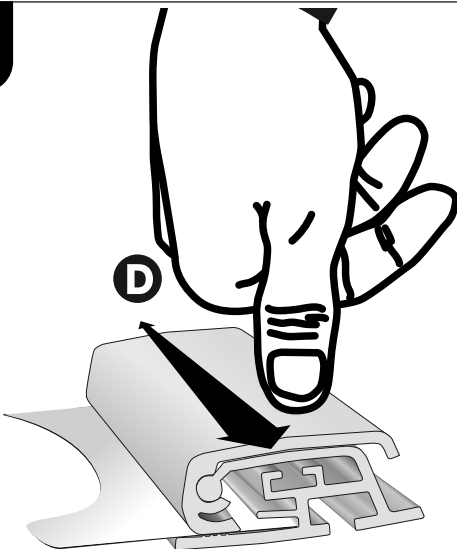

D. Secure the panel by pressing the profile firmly together.